

150Mbps 802.11N 3G Mobile Wireless Router

R36 User Guide



Contents

INTRODUCTION	3
KEY HARDWARE FEATURES.....	3
DESCRIPTION OF CAPABILITIES	3
HARDWARE DESCRIPTION	5
LED INDICATORS.....	7
INITIAL CONFIGURATION	9
CONNECTING TO THE LOGIN PAGE.....	9
HOME PAGE AND MAIN MENU	10
SETUP WIZARD.....	11
USB Adapter with Static IP	11
USB Adapter with Dynamic IP	16
USB Adapter with PPOE.....	20
Using 3G Modem	21
Using DSL Connection	25
Using DSL Modem & 3G Modem	26
Establishing PPTP	27
Establishing L2TP	28
Wireless Configuration.....	30
BASIC SETTINGS	30
ADVANCED SETTINGS.....	33
WLAN SECURITY	38
WIRELESS DISTRIBUTION SYSTEM (WDS).....	45
WI-FI PROTECTED SETUP (WPS).....	49
FIREWALL CONFIGURATION.....	51
MAC/IP/PORT FILTERING.....	51
CURRENT FILTER RULES.....	52
VIRTUAL SERVER SETTINGS (PORT FORWARDING)	52
CURRENT VIRTUAL SERVERS IN SYSTEM.....	53
DMZ.....	54
ADVANCED SETTINGS	55

INTRODUCTION

The 150Mbps Wireless-N 3G Mobile Wireless Router

(R36) supports routing from an Internet Service Provider (ISP) connection (DSL or cable modem) to a local network. It is simple to configure and can be up and running in minutes.

KEY HARDWARE FEATURES

The following table describes the main hardware features of the 3G Mobile Wireless Router.

Description

WAN Port: One 100BASE-TX RJ-45 port for connecting to the Internet.

LAN Port: One 100BASE-TX RJ-45 port for local network connections.

USB Port: One USB slot for a 3G or 3.5G modem and USB Wireless

Card WPS Button: To set up a secure connection to a wireless device.

Reset Button: For resetting the unit and restoring factory defaults.

LEDs: Provides LED indicators for Power, WAN port, LAN port, and WLAN status.

Mounting Options: Can be mounted on any horizontal surface such as a desktop or shelf, or on a wall using two screws.

DESCRIPTION OF CAPABILITIES

Internet connection through an RJ-45 WAN port.

Local network connection through one 10/100 Mbps Ethernet port.

DHCP for dynamic IP configuration.

Firewall with Stateful Packet Inspection, client privileges, and NAT.

NAT also enables multi-user Internet access via a single user account, and virtual server functionality (providing protected access to Internet services such as Web, FTP, e-mail, and Telnet).

VPN passthrough (IPsec, PPTP, or L2TP).

User-definable application sensing tunnel supports applications requiring multiple connections.

Easy setup and management through an easy-to-use web browser interface on any operating system that supports TCP/IP.

Compatible with all popular Internet applications.

APPLICATIONS Many advanced networking features are provided by the 3G Mobile Wireless Router:

◆ **Wired LAN** — The 3G Mobile Wireless Router provides connectivity to wired Ethernet devices, making it easy to create a network in small offices or homes.

Internet Access — This device supports Internet access through a WAN connection. Since many DSL providers use PPPoE, PPTP, or L2TP to establish communications with end users, the 3G Mobile Wireless Router includes built-in clients for these protocols, eliminating the need to install these services on your computer.

Shared IP Address — The 3G Mobile Wireless Router provides Internet access for up to 253 users using a single shared IP address account. ◆ **Virtual Server** — If you have a fixed IP address, you can set the 3G Mobile Wireless Router to act as a virtual host for network address translation. Remote users access various services at your site using a static IP address. Then, depending on the requested service (or port number), the 3G Mobile Wireless Router can route the request to the appropriate server (at another internal IP address). This secures your network from direct attack by hackers, and provides more flexible management by allowing you to change internal IP addresses without affecting outside access to your network.

◆ **DMZ Host Support** — Allows a networked computer to be fully exposed to the Internet. This function is used when NAT and firewall security prevent an Internet application from functioning correctly.

◆ **Security** — The 3G Mobile Wireless Router supports security features that deny Internet access to specified users, or filter all requests for specific services. WPA (Wi-Fi Protected Access) and MAC filtering provide security over the wireless network.

◆ **Virtual Private Network (VPN) Passthrough** — The 3G Mobile Wireless Router supports the passthrough of three of the most commonly used VPN



protocols – IPsec, PPTP, and L2TP. These protocols allow remote users to establish a secure connection to another network. If your service provider supports VPNs, then these protocols can be used to create an authenticated and encrypted tunnel for passing secure data over the Internet (that is, a traditionally shared data network).

- **IPsec (Internet Protocol Security)** — Encrypts and authenticates entire IP packets and encapsulates them into new IP packets for secure communications between networks.
- **PPTP (Point-to-Point Tunneling Protocol)** — Provides a secure tunnel for remote client access to a PPTP security gateway. PPTP includes provisions for call origination and flow control required by ISPs.
- **L2TP (Layer 2 Tunneling Protocol)** — Merges the best features of PPTP and the Layer 2 Forwarding (L2F) protocol. Like PPTP, L2TP requires that the ISP's routers support the protocol.

HARDWARE DESCRIPTION

The 150Mbps Wireless-N 3G Mobile Wireless Router, from herein referred to as 3G Mobile Wireless Router, connects to the Internet through its RJ-45 WAN port. It connects directly to your PC or to a local area network using its RJ-45 Fast Ethernet LAN port.


The 3G Mobile Wireless Router includes an LED display on the front panel for system power and port indications that simplifies installation and network troubleshooting.

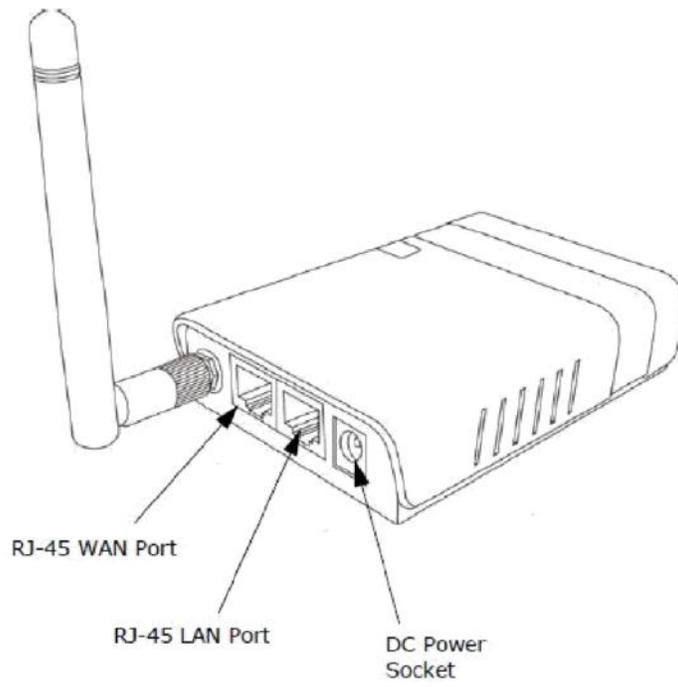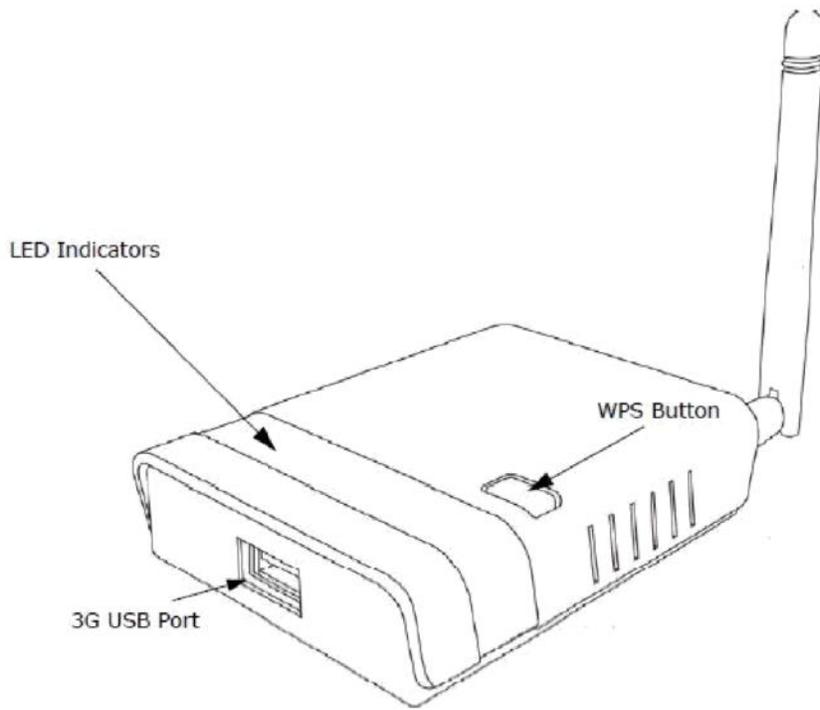

LED INDICATORS

The 3G Mobile Wireless Router includes four status LED indicators, as

described in the following figure and table.

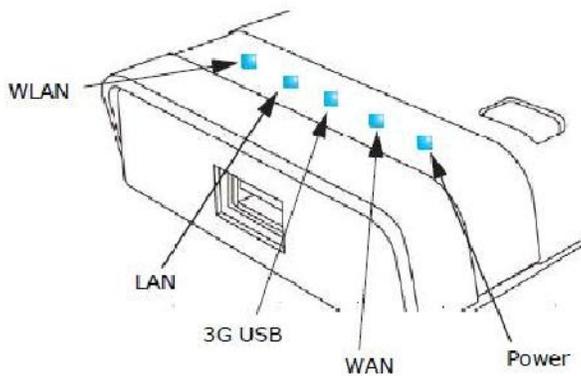

LED Behavior

LED	Status	Description
Power	On Blue	The unit is receiving power and is operating normally.
	Off	There is no power currently being supplied to the unit.
WLAN	On/Blinking Blue	The 802.11n radio is enabled and transmitting or receiving data through wireless links.
	Off	The 802.11n radio is disabled.
WAN	On Blue	The Ethernet WAN port is acquiring an IP address.
	Blinking	The Ethernet WAN port is connected and is transmitting/receiving data.
	Off	The Ethernet WAN port is disconnected or has malfunctioned.
LAN	On Blue	The Ethernet LAN port is connected to a PC or server.
	Blinking	The Ethernet port is connected and is transmitting or receiving data.
	Off	The Ethernet port is disconnected or has malfunctioned.
3G USB	On Blue	A 3G connection has been established.
	Slow Blinking	A 3G connection is in progress.
	Fast Blinking	The wrong 3G PIN code has been entered, or the 3G budget limit has been reached.
	5 Blinks Cycle	The 3G pre-limit budget has been reached.
	Off	There is no modem connected to the 3G USB port, or the device has failed.

ETHERNET WAN PORT A 100BASE-TX RJ-45 port that can be attached to an Internet access device, such as a DSL or Cable modem.


ETHERNET LAN PORT The 3G Mobile Wireless Router has one 100BASE-TX RJ-45 port that can be attached directly to a PC or 10BASE-T/100BASE-TX LAN segments. This port supports automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs, switches, or hubs.

3G & USB Wireless Card USB PORT Supports connection to a wireless cellular 3G or USB Wireless Card for broadband Internet access.

POWER CONNECTOR The 3G Mobile Wireless Router must be powered with its supplied power adapter. Failure to do so results in voiding of any warranty supplied with the product. The power adapter automatically adjusts to any voltage between 100~240 volts at 50 or 60 Hz, and supplies 12 volts DC power to the unit. No voltage range settings are required.

WPS BUTTON Press the WPS button to automatically configure the 3G Mobile Wireless Router with other WPS devices in the WLAN.

RESET BUTTON The Reset button is used to restore the factory default configuration. If you hold down the button for 5 seconds or more, any configuration changes you may have made are removed, and the factory default configuration is restored to the 3G Mobile Wireless Router.

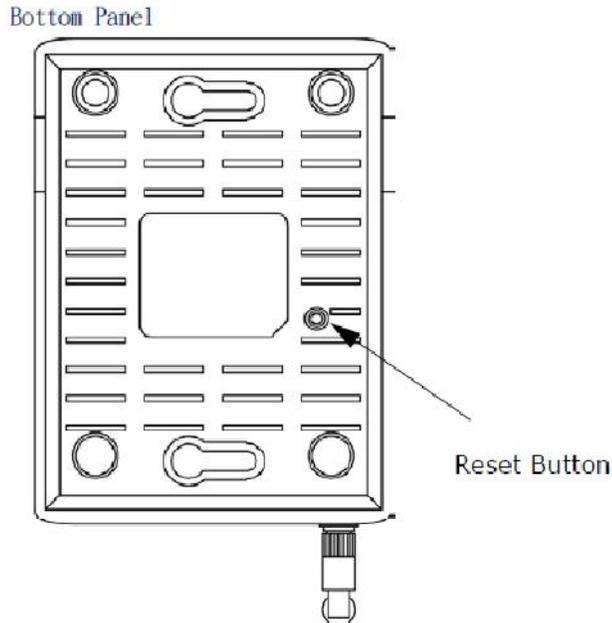

INITIAL CONFIGURATION

The 3G Mobile Wireless Router offers a user-friendly web-based management interface for the configuration of all the unit's features. Any

PC directly attached to the unit can access the management interface using a web browser, such as Internet Explorer (version 6.0 or above).

CONNECTING TO THE LOGIN PAGE

It is recommended to make initial configuration changes by connecting a PC directly to the 3G Mobile Wireless Router's LAN port. The 3G Mobile Wireless Router has a default IP address of 192.168.2.1 and a subnet mask of 255.255.255.0. You must set your PC IP address to be on the same subnet as the 3G Mobile Wireless Router (that is, the PC and 3G Mobile Wireless Router addresses must both start 192.168.2.x). To access the 3G Mobile Wireless Router's management interface, follow these steps:

- 1.** Use your web browser to connect to the management interface using the default IP address of 192.168.2.1.
- 2.** Log into the interface by entering the default username –admin|| and password –admin,|| then click OK.



HOME PAGE AND MAIN MENU

After logging in to the web interface, the Status page displays. The Home page shows the main menu and the method to access the Setup Wizard.

ALFA
NETWORK
USB WI-FI Router
R38

Status
Easy Setup
Advanced
Language English

Internet Configuration

Connected Type	USB-WLAN(DHCP)	Connected Status	Disconnected/Connecting...
WAN IP Address		Subnet Mask	
Default Gateway		Primary Domain Name Server	
Secondary Domain Name Server		MAC Address	

USB Wireless Adapter Information

Network Mode	Personal	Unique ID (BSSID)	
Network Name (SSID)		Connection Speed	
Signal Strength			

[Change Profile](#)

Security Settings

Authentication	Disable	Encryption	Disable
-----------------------	---------	-------------------	---------

LAN Configuration

LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:CC:CA:19:80:68		

System Info

Firmware Version	0.2.0.4-1230 (Dec 30 2010)	System Time	Fri, 01 Jan 2010 03:49:15
Operation Mode	Router Mode		

SETUP WIZARD

The Wizard is designed to help you configure the basic settings required to get the 3G Mobile Wireless Router up and running. There are only a few basic steps you need to set up the 3G Mobile Wireless Router and provide a connection.

Click on Easy Setup to bring up the wizard



ALFA NETWORK USB Wi-Fi Router R36

Status Easy Setup Advanced Language English

Please select a connection type

- USB Wireless adapter
- 3G dongle
- ADSL modem
- Bridge

Option #1 - WAN

SETTINGS – USB Wireless Adapter Mode: Static IP

Enables support for AWUS wireless card as a WAN connection by selecting USB Wireless Adapter from the Easy Setup page.



ALFA NETWORK USB Wi-Fi Router R36

Status Easy Setup Advanced Language English

Please select a connection type

- USB Wireless adapter
- 3G dongle
- ADSL modem
- Bridge

Screen shows saving in progress after 3G dongle has been selected.



Select Static (Fixed IP) from the drop down menu from Connection Mode. Prepare an available SSID after Site Survey.



◆ **IP Address** — The IP address of the 3G Mobile Wireless Router. Valid

IP addresses consist of four decimal numbers, 0 to 255, separated by periods.

Subnet Mask — The mask that identifies the host address bits used for routing to specific subnets.

Default Gateway — The IP address of the gateway router for the 3G Mobile Wireless Router, which is used if the requested destination address is not on the local subnet.


Primary DNS Server — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

Secondary DNS Server — The IP address of the Secondary Domain Name Server.


◆ **Security Mode** — Specifies the security mode for the SSID. Select the security method and then configure the required parameters. (Options: Disabled, Open, Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled)

Click Site Survey to scan available network that you need to connect to it.

Click Rescan on the pop up screen to scan available network that you need to connect to it.

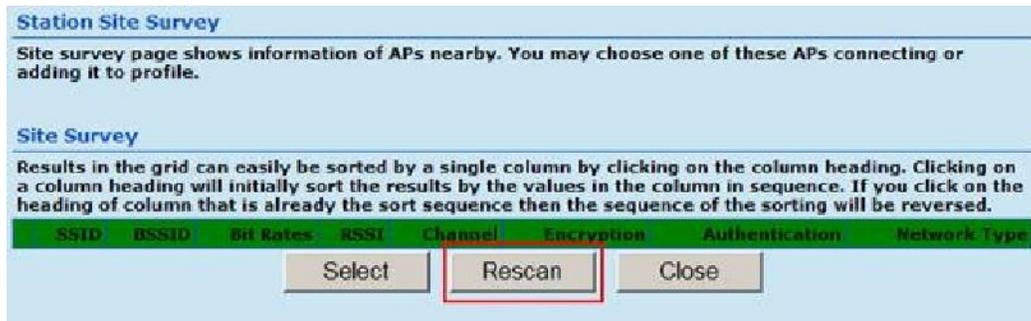

Scanning for available wifi network.

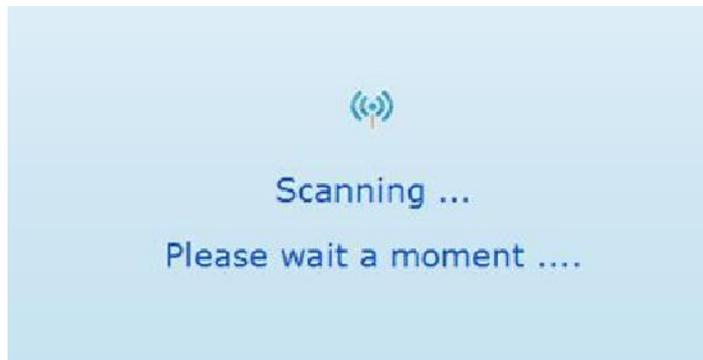

Click on the SSID that you attempt to connect to it; VAP is the SSID that we are going to connect in this example. Click Close when finished.

Site Survey

Results in the grid can easily be sorted by a single column by clicking on the column heading. Clicking on a column heading will initially sort the results by the values in the column in sequence. If you click on the heading of column that is already the sort sequence then the sequence of the sorting will be reversed.

	SSID	BSSID	Bit Rates	RSSI	Channel	Encryption	Authentication	Network Type
<input checked="" type="radio"/>	VAP	00:11:45:02:48:07	54 Mb/s	69/100	1	None	None	Infrastructure
<input type="radio"/>	Alticast_01	00:0E:E8:F7:13:D5	54 Mb/s	60/100	1	TKIP	WPA1	Infrastructure
<input type="radio"/>	WLAN	00:05:CA:43:19:18	54 Mb/s	57/100	1	None	None	Infrastructure
<input type="radio"/>	WWW	00:C0:CA:36:C6:16	54 Mb/s	89/100	8	AES/TKIP	WPA2	Infrastructure
<input type="radio"/>	TP-LINK	94:0C:6D:00:ED:65	54 Mb/s	85/100	6	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	Kentstar2	00:08:54:AE:C0:08	54 Mb/s	85/100	11	AES/TKIP	WPA1	Infrastructure
<input type="radio"/>	guest	00:1C:0E:41:6B:21	54 Mb/s	55/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	WLAN	00:05:CA:00:44:64	54 Mb/s	49/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	ALFA	00:22:2D:84:E2:26	54 Mb/s	99/100	14	None	None	Infrastructure
<input type="radio"/>	York_Hsiao_AP	00:03:2F:31:A2:CE	54 Mb/s	47/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	3G router	00:C0:CA:36:DC:E2	54 Mb/s	51/100	11	None	None	Infrastructure
<input type="radio"/>	employee	00:1C:0E:41:6B:20	54 Mb/s	58/100	11	WEP	OPEN/SHARED	Infrastructure

Select Rescan Close

Now, it shows the SSID and BSSID that AWUS wireless card is going to connect. Click Next when finished.

States Easy Setup Advanced Language English

System Configuration

Connection Mode: Cable/Dynamic IP (DHCP)

DHCP Mode

Hostname: R36

Primary DNS Server: Secondary DNS Server:

USB Wireless adapter Configuration

SSID: VAP bSSID(optional): 00:11:45:02:48:07

Network Type: Infrastructure Site Survey

Security Policy

Security Mode: Disable

Next

Screen shows saving in progress

States Easy Setup Advanced Language English


 Saving ...
 Please wait a moment

Configure the SSID and Security Mode of the R36 Router, ALFA-Extend in this example.



◆ **Access Policy** — The 3G Mobile Wireless Router provides a MAC address filtering facility. The access policy can be set to allow or reject specific station MAC addresses. This feature can be used to connect known wireless devices that may not be able to support the configured security mode.

◆ **Security Mode** — Specifies the security mode for the SSID. Select the security method and then configure the required parameters. (Options: Disabled, Open, Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled)

NOTE: To keep your wireless network protected and secure, you should implement the highest security possible. For small networks, it is recommended to select WPA2-PSK using AES encryption as the most secure option. However, if you have older wireless devices in the network that do not support AES encryption, select TKIP as the encryption algorithm.

After R36 3G Router is back online from rebooting, you may login the management page to check its status and associated information.



Option #1 - WAN

SETTINGS – USB Wireless Card

Mode: DHCP

Enables support for AWUS wireless card as a WAN connection by selecting USB Wireless Adapter from the Easy Setup page.



Screen shows saving in progress after 3G dongle has been selected.



Select Static (Fixed IP) from the drop down menu from Connection Mode. Prepare an available SSID after Site Survey.

The screenshot shows the configuration interface for an ALFA Network USB Wi-Fi Router R36. The interface is divided into sections: System Configuration, DHCP Mode, USB Wireless adapter Configuration, and Security Policy. The Connection Mode is set to Cable/Dynamic IP (DHCP). The Hostname is R36. The Primary and Secondary DNS Servers are empty. The Network Type is Infrastructure, and the Security Mode is Disable. A 'Next' button is located at the bottom of the configuration area.

Hostname — Specifies the host name of the DHCP client. (Default: R36)

Primary DNS Server — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

Secondary DNS Server — The IP address of the Secondary Domain Name Server.

◆ **Security Mode** — Specifies the security mode for the SSID. Select the security method and then configure the required parameters. (Options: Disabled, Open, Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled)

NOTE: To keep your wireless network protected and secure, you should implement the highest security possible. For small networks, it is recommended to select WPA2-PSK using AES encryption as the most secure option. However, if you have older wireless devices in the network that do not support AES encryption, select TKIP as the encryption algorithm.

Click Site Survey to scan available network that you need to connect to it.

Click Rescan on the pop up screen to scan available network that you need to connect to it.

Station Site Survey

Site survey page shows information of APs nearby. You may choose one of these APs connecting or adding it to profile.


Site Survey

Results in the grid can easily be sorted by a single column by clicking on the column heading. Clicking on a column heading will initially sort the results by the values in the column in sequence. If you click on the heading of column that is already the sort sequence then the sequence of the sorting will be reversed.

SSID	BSSID	Bit Rates	RSSI	Channel	Encryption	Authentication	Network Type
------	-------	-----------	------	---------	------------	----------------	--------------

Select Rescan Close

Scanning for available wifi network.

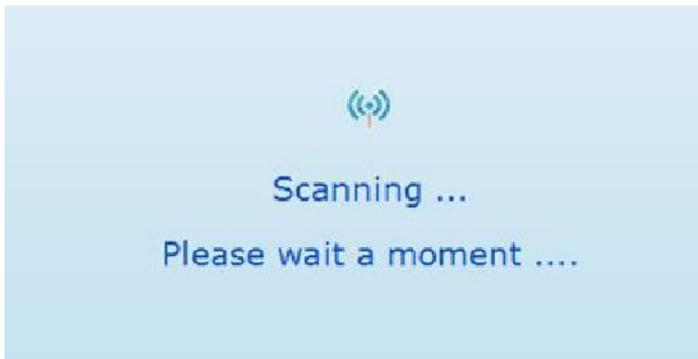

Click on the SSID that you attempt to connect to it; VAP is the SSID that we are going to connect in this example. Click Close when finished.

Site Survey

Results in the grid can easily be sorted by a single column by clicking on the column heading. Clicking on a column heading will initially sort the results by the values in the column in sequence. If you click on the heading of column that is already the sort sequence then the sequence of the sorting will be reversed.

	SSID	BSSID	Bit Rates	RSSI	Channel	Encryption	Authentication	Network Type
<input checked="" type="radio"/>	VAP	00:11:45:02:48:07	54 Mb/s	69/100	1	None	None	Infrastructure
<input type="radio"/>	Alticast_01	00:0E:E8:F7:13:D5	54 Mb/s	60/100	1	TKIP	WPA1	Infrastructure
<input type="radio"/>	WLAN	00:05:CA:43:19:18	54 Mb/s	57/100	1	None	None	Infrastructure
<input type="radio"/>	WWW	00:CD:CA:36:C6:16	54 Mb/s	89/100	8	AES/TKIP	WPA2	Infrastructure
<input type="radio"/>	TP-LINK	94:0C:6D:00:ED:65	54 Mb/s	85/100	6	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	Kentstar2	00:08:54:AE:C0:08	54 Mb/s	85/100	11	AES/TKIP	WPA1	Infrastructure
<input type="radio"/>	guest	00:1C:0E:41:6B:21	54 Mb/s	55/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	WLAN	00:05:CA:00:44:64	54 Mb/s	49/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	ALFA	00:22:2D:B4:E2:26	54 Mb/s	99/100	14	None	None	Infrastructure
<input type="radio"/>	York_Hsiao_AP	00:03:2F:31:A2:CE	54 Mb/s	47/100	11	WEP	OPEN/SHARED	Infrastructure
<input type="radio"/>	3G router	00:C0:CA:36:DC:E2	54 Mb/s	51/100	11	None	None	Infrastructure
<input type="radio"/>	employee	00:1C:0E:41:6B:20	54 Mb/s	58/100	11	WEP	OPEN/SHARED	Infrastructure

Select Rescan Close

Now, it shows the SSID and BSSID that AWUS wireless card is going to connect. Click Next when finished.

System Configuration

Connection Mode: Cable/Dynamic IP (DHCP)

DHCP Mode

Hostname: R36

Primary DNS Server: [] Secondary DNS Server: []

USB Wireless adapter Configuration

SSID: VAP BSSID(optional): 00:11:45:02:48:07


Network Type: Infrastructure [Site Survey]

Security Policy

Security Mode: Disable

Next

Screen shows saving in progress

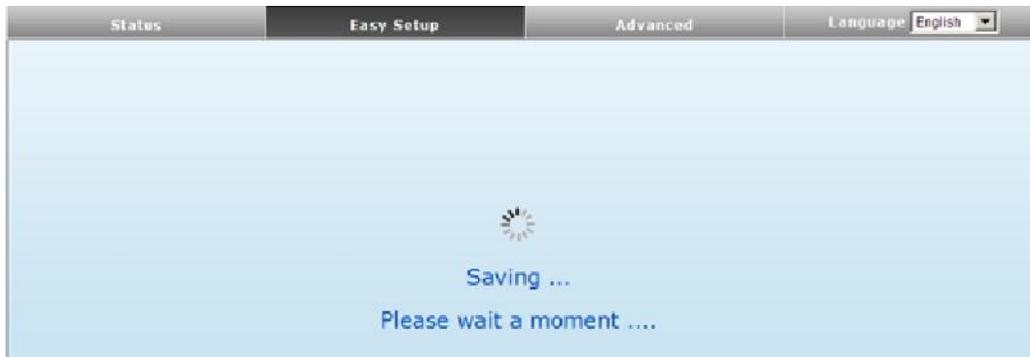

Configure the SSID and Security Mode of the R36 Router, ALFA-Extend in this example.

Wireless Security and Encryption Settings

The Wireless Security and Encryption Settings page allows you to make detailed security configurations to prevent unauthorized access and monitoring.

Select "ALFA-Extend"

SSID Choice: ALFA-Extend Security Mode: Disable

Access Policy

Policy: Disable

Add a station MAC: []

Previous Done

- ◆ **Access Policy** — The 3G Mobile Wireless Router provides a MAC address filtering facility. The access policy can be set to allow or reject specific station MAC addresses. This feature can be used to connect known wireless devices that may not be able to support the configured security mode.
- ◆ **Security Mode** — Specifies the security mode for the SSID. Select the security method and then configure the required parameters. (Options: Disabled, Open,

Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled

NOTE: To keep your wireless network protected and secure, you should implement the highest security possible. For small networks, it is recommended to select WPA2-PSK using AES encryption as the most secure option. However, if you have older wireless devices in the network that do not support AES encryption, select TKIP as the encryption algorithm.

After R36 3G Router is back online from rebooting, you may login the management page to check its status and associated information.



The screenshot shows the 'Advanced' configuration page of the R36 3G Router. The page is divided into several sections: Internet Configuration, USB Wireless Adaptor Information, Security Settings, LAN Configuration, and System Info. Red boxes highlight the 'Connected Status' (Connected) and 'Signal Strength' (79/100) fields.

Internet Configuration	
Connected Type	USB-WLAN(DHCP)
WAN IP Address	192.168.1.143
Default Gateway	192.168.1.2
Secondary Domain Name Server	192.168.1.2
Connected Status	Connected
Subnet Mask	255.255.255.0
Primary Domain Name Server	192.168.1.2
HAC Address	00:C0:CA:18:2D:58

USB Wireless Adaptor Information	
Network Mode	Infrastructure
Network Name (SSID)	WAP
Signal Strength	79/100
Protocol	802.11bg linked
Unique ID (BSSID)	00:11:45:02:48:07
Connection Speed	54 Mb/s

Security Settings	
Authentication	Disable
Encryption	Disable

LAN Configuration	
LAN IP Address	192.168.2.1
HAC Address	00:22:2D:84:E2:24
LAN Netmask	255.255.255.0

System Info	
Firmware Version	0.2.0.2-1011 (Oct 11 2010)
System Time	Fri, 01 Jan 2010 08:00:49
Operation Mode	Router Mode

Option #1 – WAN

SETTINGS – USB Wireless Card

Mode: PPOE

Enable ADSL (PPoE) with Internet connection when USB wireless card connects to access point where no IP address assigned.

◆ **User Name** — Sets the PPPoE user name for the WAN port.
(Default: pppoe_user; Range: 1~32 characters)

Password — Sets a PPPoE password for the WAN port.
(Default: pppoe_password; Range: 1~32 characters)

Verify Password — Prompts you to re-enter your chosen password.

Operation Mode — Enables and configures the keep alive time and configures the on-demand idle time.

Option #2 - WAN

SETTINGS - 3G Dongle

Enables support for a USB 3G modem as a WAN connection by selecting 3G dongle from the Easy Setup page



Screen shows saving in progress after 3G dongle has been selected.



Pin Code Protect — Enables the use of a PIN code (personal identification number) to encrypt access to the 3G modem connection. Some service providers do not require PIN code authentication. If a PIN code is not required for your 3G or 3.5G modem, disable this function. (Default: Disabled)

Dial Code — A dialled access code that connects the USB device to the service provider.

APN Service — The access point name (APN) that uniquely identifies the 3G or 3.5G service provider.

User Name — The user name of the account registered with the 3G or 3.5G service provider.

◆ **Password** — The password of the account registered with the 3G or 3.5G service provider.

- ◆ **Budget Control** — Enables a monthly limit on time or total data. (Default: Disabled)

If the Budget Control has been enabled,

The screenshot shows a configuration window for Budget Control. The 'Enable (default:disabled)' checkbox is checked and highlighted with a red box. Below it, the 'Budget Criterion' section has 'Time Budget(1~999)' set to 1 hour per month and 'Data Budget(3~4000)' set to 3 MByte per month with a dropdown menu set to 'Download'. The 'Actions if Over Budget' section has 'Drop Current Connection' checked and 'Disallow New Connection' unchecked. The 'Budget Policy' section has 'Trigger by Limit Budget' set to 90% of the time budget and 'Will recur every' set to 10 minutes. The 'Budget Counter' section has 'Reset on' set to '1st day per month' and 'If not over budget!'. The 'E-mail Settings' section has 'Mail SMTP Authentication' set to 'LOGIN', and fields for 'User Name', 'Password', 'Mail Server', 'Mail Sender', and 'Mail Recipient'. A 'Next' button is at the bottom.

- ◆ **Budget Criterion** — Specifies budget limits set by time or data.
 - **Time Budget** — Specify the amount of time (in hours) that can be used for the 3G connection per month. (Range: 1~999 hours; Default: 1 hour)
 - **Data Budget** — Specify how much Download/Upload data (in MBytes) is allowed per month for the 3G connection. The drop-down list specifies if the data budget is for download, upload, or download and upload. (Range: 3~4000 MBytes; Default: 3 MBytes)
- ◆ **Budget Policy** — Specifies the action to take when budget limits have been reached.
 - **Action if Over Budget** — Specifies the the action to take when a budget limit has been exceeded:
 - **Drop Current Connection** — Immediately drop the current connection. (Default: Enabled)
 - **Disallow New Connection** — Do not permit any new connections. (Default: Enabled)
 - **Trigger by Limit Budget** — Specifies the percentage of the time or data budget at which to start sending E-mail alerts at the indicated time interval. When E-mail alerts are enabled, be sure to configure the E-mail settings. (Default: 90% of budget, E-mail Alerts disabled, recurring every 10 minutes)
 - **E-mail Settings** — The unit can use SMTP (Simple Mail Transfer Protocol) to send E-mail messages when triggered by the specified budget policy limits.
 - **Mail SMTP Authentication** — Specifies a user name and password for SMTP

server authentication. (Options: PLAIN, LOGIN, or Disabled.)

- **User Name** — Enter the user name for the SMTP server account.
- **Password** — Enter the password for the SMTP server account.

Mail Server — Specifies the URL of the SMTP mail server that will send the alert messages.

Mail Sender — Specifies an E-mail address on the SMTP server that will send the alert messages.

- **Mail Recipient** — The E-mail address of the recipient of the alert messages.
- ♦ **Budget Counter** — Select the day of the month on which to reset the time/data budget counters. (Default: 1st day per month)

Press Next to bring up configuration page for R36's SSID and Security Mode, ALFA-3G is the SSID in this document/example.

Wireless Security and Encryption Settings

The Wireless Security and Encryption Settings page allows you to make detailed security configurations to prevent unauthorized access and monitoring.

Select

SSID Choice: ALFA-3G Security Mode: "ALFA" Disable

Access Policy

Policy: Disable

Add a station MAC

Previous Done

Security Mode — Specifies the security mode for the SSID. Select the security method and then configure the required parameters. (Options: Disabled, Open, Shared, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-PSK_WPA2-PSK, WPA, WPA2, WPA1_WPA2, 802.1X; Default: Disabled)

Access Policy — The 3G Mobile Wireless Router provides a MAC address filtering facility. The access policy can be set to allow or reject specific station MAC addresses. This feature can be used to connect known wireless devices that may not be able to support the configured security mode.

Press Done to save the configuration.

After R36 3G Router is back online from rebooting, you may login the management page to check its status and associated information.

Internet Configuration			
Connected Type	3G	Connected Status	Connected
WAN IP Address	111.82.243.227	Subnet Mask	255.255.255.255
Default Gateway	10.112.112.112	Primary Domain Name Server	168.95.1.1
Secondary Domain Name Server	168.95.192.1	MAC Address	00:00:00:00:00:00
LAN Configuration			
LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:C0:CA:36:A2:14		
System Info			
Firmware Version	0.2.0.2-1 (Oct 11 2010)	System Time	Thu, 02 Dec 2010 08:03:18
Operation Mode	Router Mode		

Option #3 - WAN

SETTINGS – ADSL Modem

Mode: PPPoE

Select ADSL Modem to enable the 3G Mobile Wireless Router IP address to be assigned automatically from an Internet service provider (ISP) through a DSL modem using Point-to-Point Protocol over Ethernet (PPPoE).

ADSL Modem Connection Setting			
WAN Connections	Single Wan(/ADSL Only)	<input type="checkbox"/>	MAC Clone
PPPoE Mode			
User Name	pppoe user		
Password	••••••••	Verify Password	••••••••
Operation Mode	Keep Alive	Keep Alive Mode: Redial Period	60 Seconds
		On Demand Mode: Idle Time	5 Minutes
Next			

◆ **WAN Connection** — Select –Single WAN (ADSL only) for the WAN port connection from the drop-down list.

▪ **Enable MAC Clone** — Some ISPs limit Internet connections to a specified MAC address. This setting allows you to manually change the MAC address of the 3G Mobile Wireless Router's WAN interface to match the PC's MAC address provided to your ISP for registration. You can enter the registered MAC address manually by typing it in the boxes provided. Otherwise, connect only the PC with the registered MAC address to the 3G Mobile Wireless Router, then click the –Clone your PC's MAC Address. (Default: Disable)

◆ **User Name** — Sets the PPPoE user name for the WAN port. (Default: pppoe_user; Range: 1~32 characters)

Password — Sets a PPPoE password for the WAN port. (Default: pppoe_password; Range: 1~32 characters)

Verify Password — Prompts you to re-enter your chosen password.

◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time.

Note,

If static IP is required for your DSL modem then you need to click Advanced tag followed by WAN to bring up Static IP Configuration

The screenshot shows the 'Wide Area Network (WAN) Settings' page. At the top, there are tabs for 'Status', 'Easy Setup', 'Advanced', and 'Language' (set to English). Below the tabs, a warning message states: 'This section allows you to configure the connection type and other related WAN parameters suitable to your environment. When Dual WAN has been selected, only Keep Alive mode will be supported. If a 3G USB Modem is selected as the WAN Connection Type, an extended amount of time is required for driver location and the dial up process.' The 'WAN Connections' section has 'Ethernet Port' set to 'Static (Fixed IP)' and 'USB Port' set to 'Disable'. The 'Static Mode' section includes fields for 'IP Address' (192.168.1.1), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.1.254), and 'Secondary DNS Server'. 'Apply' and 'Cancel' buttons are located at the bottom of the form.

Option #3 - WAN

SETTINGS – ADSL Modem Mode:

Dual WAN (ADSL + 3G)

You may enable 3G USB as backup WAN connection when DSL is not functioning.

The screenshot shows the 'ADSL Modem Connection Setting' page. Under 'WAN Connections', 'Dual Wan(ADSL+3G)' is selected. The 'Dual WAN Mode' section has 'Fallback of dual wan' set to 'Disable'. 'Detect IP address of Master WAN' is 199.7.83.42 and 'Detect IP address of Backup WAN' is 199.7.83.42. 'Detect Timeout' is 3 seconds. The 'PPPoE Mode' section has 'User Name' as 'pppoe_user' and 'Password' as a masked field. 'Operation Mode' is 'Keep Alive' with a 'Radial Period' of 60 seconds. The '3G' section has 'Pin Code Protect' disabled, 'Dial Code' as '*99#', 'APN Service' as 'internet', and 'User Name' as '3G_USERNAME'. 'Budget Control' is disabled. A 'Next' button is at the bottom.

Please refer to page 20, Option #2: 3G Dongle, for setup detail on 3G modem.

Note,

You may reverse the primary & backup WAN connection by click Advanced tag followed by WAN

Status	Easy Setup	Advanced	Language English
<p>This section allows you to configure the connection type and other related WAN parameters suitable to your environment. When Dual WAN has been selected, only Keep Alive mode will be supported. If a 3G USB Modem is selected as the WAN Connection Type, an extended amount of time is required for driver location and the dial up process.</p>			
WAN Connections			
Ethernet Port	PPPoE (ADSL)	<input type="checkbox"/> MAC Clone	
USB Port	3G	<input type="radio"/> Master WAN <input type="radio"/> Backup WAN	
Dual WAN Mode			
Fallback of dual wan	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
Detect IP address of Master WAN	199.7.83.42	Detect IP address of Backup WAN	199.7.83.42
Detect Timeout	3 (1 ~ 5 seconds, default: 3)		
PPPoE Mode			
User Name	pppoe_user		
Password	*****	Verify Password	*****
Operation Mode	Keep Alive	Keep Alive Mode: Redial Period	60 Seconds
		On Demand Mode: Idle Time	5 Minutes
3G			
Pin Code Protect	<input type="checkbox"/> Enable		
Dial Code	*99#	APN Service	internet
User Name	3G_USERNAME	Password	*****
Budget Control	<input type="checkbox"/> Enable (default:disabled)		

Option #5 - WAN

SETTINGS – PPTP

To bring up this configuration page click Advanced tag followed by WAN.

Status	Easy Setup	Advanced	Language English
Wide Area Network (WAN) Settings			
<p>This section allows you to configure the connection type and other related WAN parameters suitable to your environment. When Dual WAN has been selected, only Keep Alive mode will be supported. If a 3G USB Modem is selected as the WAN Connection Type, an extended amount of time is required for driver location and the dial up process.</p>			
WAN Connections			
Ethernet Port	PPTP	<input type="checkbox"/> MAC Clone	
USB Port	Disable		
PPTP Mode			
Server IP	pptp_server		
User Name	pptp_user	Password	*****
Address Mode	Dynamic		
Operation Mode	Keep Alive	Keep Alive Mode: Redial Period	30 Seconds
DNS Settings (Optional)			
Primary DNS Server		Secondary DNS Server	
Apply		Cancel	

◆ **Ethernet Port** — Select –PPTP for the WAN port connection from the drop-down list.

▪ **Enable MAC Clone** — Some ISPs limit Internet connections to a specified MAC address. This setting allows you to manually change the MAC address of the 3G Mobile Wireless Router's WAN interface to match the PC's MAC address provided to your ISP for registration. You can enter the registered MAC address manually by

typing it in the boxes provided. Otherwise, connect only the PC with the registered MAC address to the 3G Mobile Wireless Router, then click the –Clone your PC’s MAC Address. (Default: Disable)

♦ **USB Port** — Enables support for a WAN connection using a USB 3G modem and USB Wireless Card. (Default: Disabled)

Server IP — Sets the PPTP server IP Address. (Default: pptp_server)

User Name — Sets the PPTP user name for the WAN port.
(Default: pptp_user; Range: 1~32 characters)

Password — Sets a PPTP password for the WAN port. (Default: pptp_password; Range: 1~32 characters)

Verify Password — Prompts you to re-enter your chosen password.

Address Mode — Sets a PPTP network mode. (Default: Dynamic)

IP Address — Sets the static IP address. (Default: 0.0.0.0, available when PPTP Network Mode is set to static IP.)

Subnet Mask — Sets the static IP subnet mask. (Default: 255.255.255.0, available when PPTP Network Mode is set to static IP.)

Default Gateway — The IP address of a router that is used when the requested destination IP address is not on the local subnet.

Operation Mode — Enables and configures the keep alive time.

Primary DNS Server — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

Secondary DNS Server — The IP address of the Secondary Domain Name Server.

Option #5 - WAN

SETTINGS – L2TP

Enable Layer 2 Tunneling Protocol (L2TP) by clicking Advanced tag followed WAN.

Status	Easy Setup	Advanced	Language English
Wide Area Network (WAN) Settings			
<p>This section allows you to configure the connection type and other related WAN parameters suitable to your environment. When Dual WAN has been selected, only Keep Alive mode will be supported. If a 3G USB Modem is selected as the WAN Connection Type, an extended amount of time is required for driver location and the dial up process.</p>			
WAN Connections			
Ethernet Port	L2TP	<input type="checkbox"/> MAC Clone	
USB Port	Disable		
L2TP Mode			
Server IP	l2tp_server		
User Name	l2tp_user	Password	••••••••
Address Mode	Dynamic		
Operation Mode	Keep Alive	Keep Alive Mode: Radial Period	60 Seconds
DNS Settings (Optional)			
Primary DNS Server		Secondary DNS Server	
Apply		Cancel	

- ◆ **Ethernet Port** — Select –L2TP|| for the WAN port connection from the drop-down list.

- **Enable MAC Clone** — Some ISPs limit Internet connections to a specified MAC address. This setting allows you to manually change the MAC address of the 3G Mobile Wireless Router’s WAN interface to match the PC's MAC address provided to your ISP for registration. You can enter the registered MAC address manually by typing it in the boxes provided. Otherwise, connect only the PC with the registered MAC address to the 3G Mobile Wireless Router, then click the –Clone your PC’s MAC Address.|| (Default: Disable)

- ◆ **USB Port** — Enables support for a WAN connection using a USB 3G Modem and USB Wireless Card. (Default: Disabled)
 - **Server IP** — Sets the L2TP server IP Address. (Default: l2tp_server)
 - **User Name** — Sets the L2TP user name for the WAN port. (Default: l2tp_user; Range: 1~32 characters)
 - **Password** — Sets a L2TP password for the WAN port. (Default: l2tp_password; Range: 1~32 characters)
 - **Verify Password** — Prompts you to re-enter your chosen password.
 - **Address Mode** — Sets a L2TP network mode. (Default: Dynamic)
 - **IP Address** — Sets the static IP address. (Default: 0.0.0.0, available when L2TP Network Mode is set to static IP.)
 - **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0, available when L2TP Network Mode is set to static IP.)
 - **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
 - **Operation Mode** — Enables and configures the keep alive time.
 - **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can

be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.

♦ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

Wireless Configuration

BASIC SETTINGS

The IEEE 802.11n interface includes configuration options for radio signal characteristics and wireless security features. The 3G Mobile Wireless Router's radio can operate in six modes, mixed 802.11b/g/n, mixed 802.11b/g, mixed 802.11g/n, 802.11n only, 802.11b only, or 802.11g only. Note that 802.11g is backward compatible with 802.11b, and 802.11n is backward compatible with 802.11b/g at slower data transmit rates.

The 3G Mobile Wireless Router supports two virtual access point (VAP) interfaces. One VAP is the primary (Network Name SSID), and the other one is referred to as "Multiple SSID1." Each VAP functions as a separate access point, and can be configured with its own Service Set Identification (SSID) and security settings. However, most radio signal parameters apply to all VAP interfaces.

Traffic to specific VAPs can be segregated based on user groups or application traffic. All VAPs can have up to 64 wireless clients, whereby the clients associate with these VAPs the same as they would with a physical access point.

The Basic Settings page allows you to configure the wireless network name (Service Set Identifier or SSID) and set the wireless security method. Click on [Wireless Settings](#), followed by [Basic](#).

Basic Wireless Settings
 This section allows you to configure basic wireless features such as SSID settings as well as HT Physical Mode settings.

Wireless Network

Wireless On/Off

Network Mode 11b/g/n mixed mode ▾

Network Name (SSID) ALFA_AP Hide

Multiple SSID1 Hide

Broadcast Network Name (SSID) Enable Disable

AP Isolation Enable Disable

MBSSID AP Isolation Enable Disable

BSSID 00:C0:CA:49:80:6A

Frequency (Channel) 2412MHz (Channel 1) ▾

HT Physical Mode

Channel Bandwidth 20 20/40

MCS Auto ▾

Aggregation MSDU (A-MSDU) Disable Enable

Decline BA Request Disable Enable

Guard Interval Long Auto

Reverse Direction Grant (RDG) Disable Enable

Auto Block ACK Disable Enable

HT Disallow TKIP Disable Enable

- ◆ **Wireless On/Off** — Enables or Disable the radio. (Default: Enable)
- ◆ **Network Mode** — Defines the radio operating mode.(Default: 11b/g/n Mixed)
 - **11b/g mixed:** Both 802.11b and 802.11g clients can communicate with the 3G Mobile Wireless Router (up to 108 Mbps), but data transmission rates may be slowed to compensate for 802.11b clients. Any 802.11n clients will also be able to communicate with the 3G Mobile Wireless Router, but they will be limited to 802.11g protocols and data transmission rates.
 - **11b only:** All 802.11b, 802.11g, and 802.11n clients will be able to communicate with the 3G Mobile Wireless Router, but the 802.11g and 802.11n clients will be limited to 802.11b protocols and data transmission rates (up to 11 Mbps).
 - **11g only:** Both 802.11g and 802.11n clients will be able to communicate with the 3G Mobile Wireless Router, but the 802.11n clients will be limited to 802.11g protocols and data transmission rates (up to 54 Mbps). Any 802.11b clients will not be able to communicate with the 3G Mobile Wireless Router
 - **11n only:** Only 802.11n clients will be able to communicate with the 3G Mobile Wireless Router (up to 150 Mbps).
 - **11g/n mixed:** Both 802.11g and 802.11n clients can communicate with the 3G Mobile Wireless Router (up to 150 Mbps), but data transmission rates may be slowed to compensate for 802.11g clients.
 - **11b/g/n Mixed:** All 802.11b/g/n clients can communicate with the 3G Mobile Wireless Router (up to 150 Mbps), but data transmission rates may be slowed to compensate for 802.11b/g clients.
- ◆ **Network Name (SSID)** — The name of the wireless network service provided by the 3G Mobile Wireless Router. Clients that want to connect

to the network must set their SSID to the same as that of the 3G Mobile Wireless Router. (Default: –API; Range: 1-32 characters)

Multiple SSID1 — One additional VAP interface supported on the device. (Default: no name configured; Range: 1-32 characters)

Broadcast Network Name (SSID) — By default, the 3G Mobile Wireless Router always broadcasts the SSID in its beacon signal.

Disabling the SSID broadcast increases security of the network because wireless clients need to already know the SSID before attempting to connect. When set to disable, the Network Name SSID, and SSID1 are automatically set to –Hide. (Default: Enabled)

(Default: Enabled)

AP Isolation — The 3G Mobile Wireless Router will isolate communication between all clients in order to protect them. Normally for users who are at hotspots. (Default: Disabled)

MBSSID AP Isolation — The 3G Mobile Wireless Router will isolate wireless clients from different SSID.

BSSID — The identifier (MAC address) of the 3G Mobile Wireless Router in the Basic Service Set (BSS) network.

Frequency (Channel) — The radio channel that the 3G Mobile Wireless Router uses to communicate with wireless clients. When multiple access points are deployed in the same area, set the channel on neighboring access points at least five channels apart to avoid interference with each other. For example, you can deploy up to three access points in the same area using channels 1, 6, 11. Note that wireless clients automatically set the channel to the same as that used by the 3G Mobile Wireless Router to which it is linked. Selecting Auto Select enables the 3G Mobile Wireless Router to automatically select an unoccupied radio channel. (Default: Channel 11)

HT PHYSICAL MODE

SETTINGS

HT Physical Mode			
Channel Bandwidth	<input checked="" type="radio"/> 20 <input type="radio"/> 20/40	Guard Interval	<input type="radio"/> Long <input checked="" type="radio"/> Auto
MCS	Auto	Reverse Direction Grant (RDG)	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Aggregation MSDU (A-MSDU)	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	Auto Block ACK	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Decline BA Request	<input type="radio"/> Disable <input checked="" type="radio"/> Enable	HT Disallow TKIP	<input type="radio"/> Disable <input checked="" type="radio"/> Enable

♦ **HT Channel Bandwidth** — The 3G Mobile Wireless Router provides a channel bandwidth of 40 MHz by default giving an 802.11g connection speed of 108 Mbps (sometimes referred to as Turbo Mode) and a 802.11n connection speed of up to 150 Mbps. Setting the HT Channel Bandwidth to 20 MHz slows connection speed for

802.11g and 802.11n to 54 Mbps and 74 Mbps respectively and ensures backward compliance for slower 802.11b devices. (Default: 20MHz)

Guard Interval — The guard interval between symbols helps receivers overcome the effects of multipath delays. When you add a guard time, the back portion of useful signal time is copied and appended to the front. (Default: Auto)

MCS — The Modulation and Coding Scheme (MCS) is a value that determines the modulation, coding and number of spatial channels. (Options: value [range] = 0~7 (1 Tx Stream), 8~15 (2 TxStream), 32 and auto (33). Default: auto)

Reverse Direction Grant (RDG) — When Reverse Direction Grant is enabled, the 3G Mobile Wireless Router can reduce the transmitted data packet collision by using the reverse direction protocol. During TXOP (Transmission Opportunity) period, the receiver could use remaining transmission time to transmit data to a sender. The RDG improves transmission performance and scalability in a wireless environment. (Default: Enabled)

Space Time Block Coding (STBC) — A mechanism that allows a unit with only one antenna to leverage multiple antennas on other 802.11n devices to improve performance and range. (Default: Enabled)

Extension Channel — When 20/40MHz channel bandwidth has been set, the extension channel option will be enabled. The extension channel will allow you to get extra bandwidth. (Default: AutoSelect.)

Aggregate MSDU (A-MSDU) — This option enables Mac Service Data Unit (MSDU) aggregation. (Default: Disabled)

Auto Block ACK — Select to block ACK (Acknowledge Number) or not during data transferring. (Default: Enabled)

Decline BA Request — Select to reject peer BA-Request or not. (Default: Disabled)

HT Disallow TKIP — Prevents the use of TKIP data encryption when using 802.11n high-throughput data rates. (Default: Enabled)

ADVANCED SETTINGS

The Advanced Settings page includes additional parameters concerning the wireless network and Wi-Fi Multimedia settings.

ADVANCED WIRELESS

The Advanced Wireless section on the Wireless Settings Advanced page includes additional radio parameters.

Status	Easy Setup	Advanced	Language English
Advanced Wireless Settings			
The Advance Wireless Setting page is available to make detailed changes to the wireless configuration. It includes items that are not available from the Basic Wireless Settings page, such as DTIM, Tx Power, WMM, and more.			
Advanced Wireless			
BG Protection Mode	Auto	Beacon Interval	100 ms (range 20 - 999, default 100)
Data Beacon Rate (DTIM)	1 ms (range 1 - 255, default 1)	Fragment Threshold	2346 (range 256 - 2346, default 2346)
RTS Threshold	2347 (range 1 - 2347, default 2347)	TX Power	100 (range 1 - 100, default 100)
Short Preamble	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Short Slot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Tx Burst	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	Packet Aggregate	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Wi-Fi Multimedia			
WMM	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
WMM Parameters	<input type="button" value="WMM Configuration"/>		
Multicast-to-Unicast Converter			
Multicast-to-Unicast	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
<input type="button" value="Apply"/>		<input type="button" value="Cancel"/>	

- ◆ **BG Protection Mode** — Enables a backward compatible protection mechanism for 802.11b clients. There are three modes: (Default: Auto)
 - **Auto** — The unit enables its protection mechanism for 802.11b clients when they are detected in the network. When 802.11b clients are not detected, the protection mechanism is disabled.
 - **On** — Forces the unit to always use protection for 802.11b clients, whether they are detected in the network or not. Note that enabling b/g Protection can slow throughput for 802.11g/n clients by as much as 50%.
 - **Off** — Forces the unit to never use protection for 802.11b clients. This prevents 802.11b clients from connecting to the network.
- ◆ **Beacon Interval** — The rate at which beacon signals are transmitted from the access point. The beacon signals allow wireless clients to maintain contact with the access point. They may also carry powermanagement information. (Range: 20-999 TUs; Default: 100 TUs)
- ◆ **Data Beacon Rate (DTIM)** — The rate at which stations in sleep mode must wake up to receive broadcast/multicast transmissions. Known also as the Delivery Traffic Indication Map (DTIM) interval, it indicates how often the MAC layer forwards broadcast/multicast traffic, which is necessary to wake up stations that are using Power Save mode. The default value of one beacon indicates that the access point will save all broadcast/multicast frames for the Basic Service Set (BSS) and forward them after every beacon. Using smaller DTIM intervals delivers broadcast/multicast frames in a more timely manner, causing stations in Power Save mode to wake up more often and drain power faster. Using higher DTIM values reduces the power used by stations in Power Save mode, but delays the transmission of broadcast/multicast frames. (Range: 1-255 beacons; Default: 1 beacon)

- ◆ **Fragmentation Threshold** – Configures the minimum packet size that can be fragmented when passing through the access point.

Fragmentation of the PDUs (Package Data Unit) can increase the reliability of transmissions because it increases the probability of a successful transmission due to smaller frame size. If there is significant interference present, or collisions due to high network utilization, try setting the fragment size to send smaller fragments. This will speed up the retransmission of smaller frames. However, it is more efficient to set the fragment size larger if very little or no interference is present because it requires overhead to send multiple frames. (Range: 256-2346 bytes; Default: 2346 bytes)

- ◆ **RTS Threshold** — Sets the packet size threshold at which a Request to Send (RTS) signal must be sent to a receiving station prior to the sending station starting communications. The access point sends RTS frames to a receiving station to negotiate the sending of a data frame. After receiving an RTS frame, the station sends a CTS (clear to send) frame to notify the sending station that it can start sending data. If the RTS threshold is set to 0, the access point always sends RTS signals. If set to 2347, the access point never sends RTS signals. If set to any other value, and the packet size equals or exceeds the RTS threshold, the RTS/CTS (Request to Send / Clear to Send) mechanism will be enabled.

The access points contending for the medium may not be aware of each other. The RTS/CTS mechanism can solve this –Hidden Node Problem.||

(Range: 1-2347 bytes: Default: 2347 bytes)

- ◆ **Short Preamble** — Sets the length of the signal preamble that is used at the start of a data transmission. Use a short preamble (96 microseconds) to increase data throughput when it is supported by all connected 802.11g clients. Use a long preamble (192 microseconds) to ensure all 802.11b clients can connect to the network. (Default: Disabled)

- ◆ **Short Slot** — Sets the basic unit of time the access point uses for calculating waiting times before data is transmitted. A short slot time (9 microseconds) can increase data throughput on the access point, but requires that all clients can support a short slot time (that is, 802.11gcompliant clients must support a short slot time). A long slot time (20 microseconds) is required if the access point has to support 802.11b clients. (Default: Enabled)

TX Burst — A performance enhancement that transmits a number of data packets at the same time when the feature is supported by compatible clients. (Default: Enabled)

Packet Aggregate — A performance enhancement that combines data packets together when the feature is supported by compatible clients.(Default: Enabled)

Wi-Fi MULTIMEDIA

The 3G Mobile Wireless Router implements Quality of Service (QoS) using the Wi-Fi Multimedia (WMM) standard. Using WMM, the access point is able to prioritize traffic and optimize performance when multiple applications compete for wireless network bandwidth at the same time. WMM employs techniques that are a subset of the developing IEEE 802.11e QoS standard and it enables access points to interoperate with both WMM-enabled clients and other devices that may lack any WMM functionality. WMM defines four access categories (ACs): voice, video, best effort, and background. These categories correspond to traffic priority levels and are mapped to IEEE 802.1D priority tags. The direct mapping of the four ACs to 802.1D priorities is specifically intended to facilitate interoperability with other wired network QoS policies. While the four ACs are specified for specific types of traffic, WMM allows the priority levels to be configured to match any network-wide QoS policy. WMM also specifies a protocol that access points can use to communicate the configured traffic priority levels to QoS-enabled wireless clients.

WMM Access Categories

Access Category	WMM Designation	Description	802.1D tags
AC_VO (AC3)	Voice	Highest priority, minimum delay. Time-sensitive data such as VoIP (Voice over IP) calls.	7, 6
AC_VI (AC2)	Video	High priority, minimum delay. Time-sensitive data such as streaming video.	5, 4
AC_BE (AC0)	Best Effort	Normal priority, medium delay and throughput. Data only affected by long delays. Data from applications or devices that lack QoS capabilities.	0, 3
AC_BK (AC1)	Background	Lowest priority. Data with no delay or throughput requirements, such as bulk data transfers.	2, 1

The Wi-Fi Multimedia section on the Wireless Settings Advanced page allows you to enable WMM and set detailed QoS parameters.



◆ **WMM** — Sets the WMM operational mode on the access point. When enabled, the QoS capabilities are advertised to WMM-enabled clients in the network. WMM must be supported on any device trying to associate with the access point. Devices that do not support this feature will not be allowed to associate with the access point.

(Default: Enabled)

- ◆ **WMM Parameters** — Click the WMM Configuration button to set detailed WMM parameters.



AIFSN (Arbitration Inter-Frame Space) — The minimum amount of wait time before the next data transmission attempt. Specify the AIFS value in the range 0-15 microseconds.

CWMin (Minimum Contention Window) — The initial upper limit of the random backoff wait time before wireless medium access can be attempted. The initial wait time is a random value between zero and the CWMin value. Specify the CWMin value in the range 0-15 microseconds. Note that the CWMin value must be equal or less than the CWMax value.

CWMax (Maximum Contention Window) — The maximum upper limit of the random backoff wait time before wireless medium access can be attempted. The contention window is doubled after each detected collision up to the CWMax value. Specify the CWMax value in the range 0-15 microseconds. Note that the CWMax value must be greater or equal to the CWMin value.

Txop (Transmit Opportunity Limit) — The maximum time an AC transmit queue has access to the wireless medium. When an AC queue is granted a transmit

opportunity, it can transmit data for a time up to the TxOpLimit. This data bursting greatly improves the efficiency for high data-rate traffic. Specify a value in the range 0-65535 microseconds.

ACM — The admission control mode for the access category. When enabled, clients are blocked from using the access category. (Default: Disabled)

AckPolicy — By default, all wireless data transmissions require the sender to wait for an acknowledgement from the receiver. WMM allows the acknowledgement wait time to be turned off for each Access Category (AC) 0-3. Although this increases data throughput, it can also result in a high number of errors when traffic levels are heavy. (Default: Acknowledge)

MULTICAST-TOUNICAST CONVERTER

The Multicast-to-Unicast Converter section on the Wireless Settings Advanced page allows you to enable multicast traffic conversion.

Converting multicast traffic to unicast before sending to wireless clients allows a longer DTIM (Data Beacon Rate) interval to be set. A longer DTIM interval prevents clients in power-save mode having to activate their radios to receive the multicast data, which saves battery life.



◆ **Multicast-to-Unicast** — Enables multicast traffic streams to be converted to unicast traffic before delivery to wireless clients. (Default: Disabled)

WLAN SECURITY


The 3G Mobile Wireless Router's wireless interface is configured by default as an –open system,|| which broadcasts a beacon signal including the configured SSID. Wireless clients with a configured SSID of –ANY|| can read the SSID from the beacon, and automatically set their SSID to allow immediate connection to the wireless network.

To implement wireless network security, you have to employ one or both of the following functions:

Authentication — It must be verified that clients attempting to connect to the network are authorized users.


Traffic Encryption — Data passing between the unit and clients must be protected

from interception and eavesdropping. The 3G Mobile Wireless Router supports ten different security mechanisms that provide various levels of authentication and encryption depending on the requirements of the network. The 3G Mobile Wireless Router supports two SSID interfaces. Each SSID interface functions as a separate access point, and can be configured with its own security settings. Click on –Wireless Settings, followed by –Security.

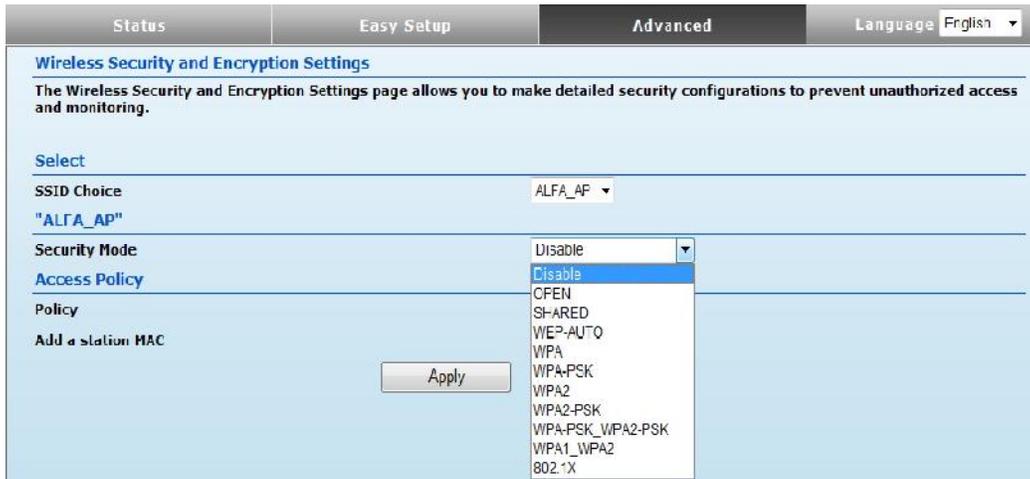

WIRED EQUIVALENT PRIVACY (WEP)

WEP provides a basic level of security, preventing unauthorized access to the network, and encrypting data transmitted between wireless clients and an access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network. When you select to use WEP, be sure to define at least one static WEP key for user authentication or data encryption. Also, be sure that the WEP shared keys are the same for each client in the wireless network.

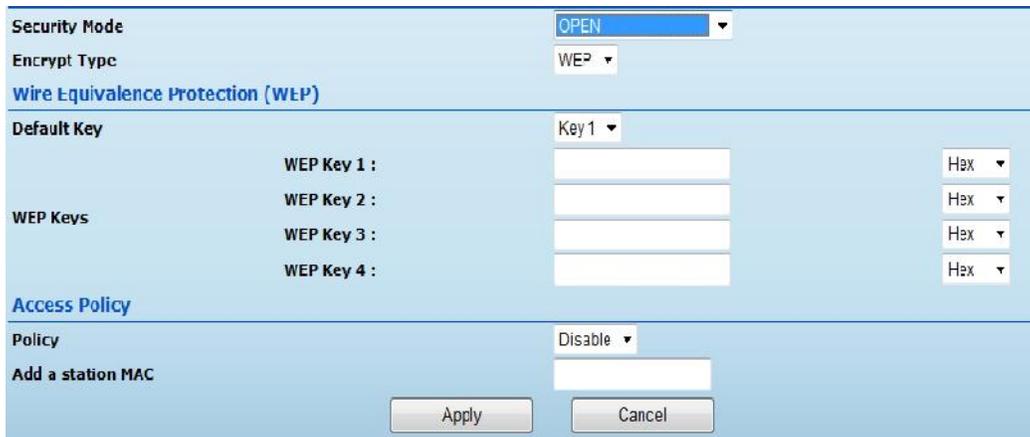

Security Mode — Configures the WEP security mode used by clients.

When using WEP, be sure to define at least one static WEP key for the 3G Mobile Wireless Router and all its clients. (Default: Disable)

OPEN — Open-system authentication accepts any client attempting to connect the 3G Mobile Wireless Router without verifying its identity. In this mode the default data encryption type is –WEP.¶

SHARED — The shared-key security uses a WEP key to authenticate clients connecting to the network and for data encryption.

WEP-AUTO — Allows wireless clients to connect to the network using Open-WEP (uses WEP for encryption only) or Shared-WEP (uses WEP for authentication and encryption).

Encrypt Type — Selects WEP for data encryption (OPEN mode only).

Default Key — Selects the WEP key number to use for authentication or data encryption. If wireless clients have all four WEP keys configured to the same values, you can change the encryption key to any of the settings without having to update the client keys. (Default: 1; Range: 1~4)

WEP Keys 1 ~ 4 — Sets WEP key values. The user must first select ASCII or hexadecimal keys. Each WEP key has an index number. Enter key values that match the key type and length settings. Enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or enter 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys. (Default: Hex, no preset value)

WPA PRE-SHARED KEY

Wi-Fi Protected Access (WPA) was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an –enterprisell and –personall mode of operation. For small home or office networks, WPA and WPA2 provide a simple –personall operating mode that uses just a pre-shared key for network access. The WPA Pre-Shared Key (WPA-PSK) mode uses a common password phrase for user authentication that is manually entered on the access point and all wireless clients. Data encryption keys are automatically generated by the access point and distributed to all clients connected to the network.

Security Mode	WPA
WPA	
WPA Algorithms	<input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIPAES
Key Renewal Interval	3600 seconds
Radius Server	
IP Address	
Port	1812
Shared Secret	
Session Timeout	0
Access Policy	
Policy	Disable
Add a station MAC	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Security Mode — Configures the WPA-PSK and WPA2-PSK security modes used by clients. When using WPA-PSK or WPA2-PSK, be sure to define the shared key for the 3G Mobile Wireless Router and all its clients. (Default: Disable)

WPA-PSK — Clients using WPA with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is TKIP.

WPA2-PSK — Clients using WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is AES.

WPA-PSK_WPA2-PSK — Clients using WPA or WPA2 with a Preshared Key are accepted for authentication. The default data encryption type is TKIP/AES. ♦ **WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)

- **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.

- **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.

- **TKIP/AES** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.

◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)

◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

WPA ENTERPRISE MODE

Wi-Fi Protected Access (WPA) was introduced as an interim solution for then vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an `-enterprise` and `-personal` mode of operation. For enterprise deployment, WPA and WPA2 use IEEE 802.1X for user authentication and require a RADIUS authentication server to be configured on the wired network. Data encryption keys are automatically generated and distributed to all clients connected to the network.

Security Mode	WPA2
WPA	
WPA Algorithms	<input type="radio"/> TKIP <input type="radio"/> AES <input type="radio"/> TKIPAES
Key Renewal Interval	3600 seconds
PMK Cache Period	10 minute
Pre-Authentication	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
RADIUS Server	
IP Address	
Port	1812
Shared Secret	
Session Timeout	0
Access Policy	
Policy	Disable
Add a station MAC	
Apply Cancel	
Copyright © 2010 ALFA NETWORK Inc. All Rights Reserved	

Security Mode — Configures the WPA and WPA2 security modes used by clients. When using WPA or WPA2, be sure there is a RADIUS server in the connected wired network, and that the RADIUS settings are configured. (Default: Disable)

WPA — Clients using WPA with an 802.1X authentication method are accepted for authentication. The default data encryption type for WPA is TKIP.

WPA2 — Clients using WPA2 with an 802.1X authentication method are accepted

for authentication. The default data encryption type for WPA is AES.

WPA1_WPA2 — Clients using WPA or WPA2 with an 802.1X authentication method are accepted for authentication. The default data encryption type is TKIP/AES.

WPA Algorithms — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)

- **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.

AES — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.

TKIP/AES — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.

- ♦ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

PMK Cache Period — WPA2 provides fast roaming for authenticated clients by retaining keys and other security information in a cache, so that if a client roams away from an access point and then returns reauthentication is not required. This parameter sets the time for deleting the cached WPA2 Pairwise Master Key (PMK) security information. (Default: 10 minutes)

Pre-Authentication — When using WPA2, pre-authentication can be enabled that allows clients to roam to another access point and be quickly associated without performing full 802.1X authentication.
(Default: Disabled)

IEEE 802.1X AND RADIUS

IEEE 802.1X is a standard framework for network access control that uses a central RADIUS server for user authentication. This control feature prevents unauthorized access to the network by requiring an 802.1X client application to submit user credentials for authentication. The 802.1X standard uses the Extensible Authentication Protocol (EAP) to pass user credentials (either digital certificates,

user names and passwords, or other) from the client to the RADIUS server. Client authentication is then verified on the RADIUS server before the client can access the network. Remote Authentication Dial-in User Service (RADIUS) is an authentication protocol that uses software running on a central server to control access to RADIUS-aware devices on the network. An authentication server contains a database of user credentials for each user that requires network access.

The WPA and WPA2 enterprise security modes use 802.1X as the method of user authentication. IEEE 802.1X can also be enabled on its own as a security mode for user authentication. When 802.1X is used, a RADIUS server must be configured and be available on the connected wired network.

The screenshot shows a configuration window for 802.1X. At the top, 'Security Mode' is set to '802.1X'. Below this, the '802.1x WEP' section has 'WEP' set to 'Disable'. The 'Radius Server' section includes fields for 'IP Address', 'Port' (set to 1812), 'Shared Secret', and 'Session Timeout' (set to 0). The 'Access Policy' section has 'Policy' set to 'Disable' and an 'Add a station MAC' field. At the bottom are 'Apply' and 'Cancel' buttons.

Security Mode — Configures the 802.1X security mode used by clients. When using 802.1X, either with WPA/WPA2 or on its own, be sure there is a configured RADIUS server in the connected wired network. (Default: Disable)

802.1X WEP: Selects WEP keys for data encryption. When enabled, WEP encryption keys are automatically generated by the RADIUS server and distributed to all connected clients. (Default: Disabled)

RADIUS Server — Configures RADIUS server settings.

IP Address — Specifies the IP address of the RADIUS server.

Port — The User Datagram Protocol (UDP) port number used by the RADIUS server for authentication messages. (Range: 1024-65535; Default: 1812)

Shared Secret — A shared text string used to encrypt messages between the access point and the RADIUS server. Be sure that the same text string is specified on the RADIUS server. Do not use blank spaces in the string. (Maximum length: 20 characters)

- ◆ **Session Timeout** — Number of seconds the access point waits for a reply from the RADIUS server before resending a request. (Range: 1-60 seconds; Default: 0)

ACCESS POLICY

The 3G Mobile Wireless Router provides a MAC address filtering facility. The access policy can be set to allow or reject specific station MAC addresses.

This feature can be used to connect known wireless devices that may not be able to support the configured security mode.

Access Policy

Policy: Allow

Add a station MAC: [input field]

Apply

Add a station MAC

- ◆ **Access Policy** — The access policy can be set to allow or reject specific station MAC addresses.
- ◆ **Add a station MAC** — Enter the MAC address of the station that you want to filter. MAC addresses must be entered in the format xx:xx:xx:xx:xx:xx.

WIRELESS DISTRIBUTION SYSTEM (WDS)


The radio interface can be configured to operate in a mode that allows it to forward traffic directly to other 3G Mobile Wireless Router units. This feature can be used to extend the range of the wireless network to reach remote clients, or to link disconnected network segments to an Internet connection.

To set up links between units, you must configure the Wireless Distribution System (WDS) forwarding table by specifying the wireless MAC address of all units to which you want to forward traffic.


NOTE: All units in a WDS wireless network must be configured with the same SSID and use the same radio channel. Also each WDS link must be configured with the same encryption key on both units in the link.

Up to four WDS links can be specified for each unit in the WDS network. The following figures illustrate an example WDS network.

Manual WDS MAC Address Configuration

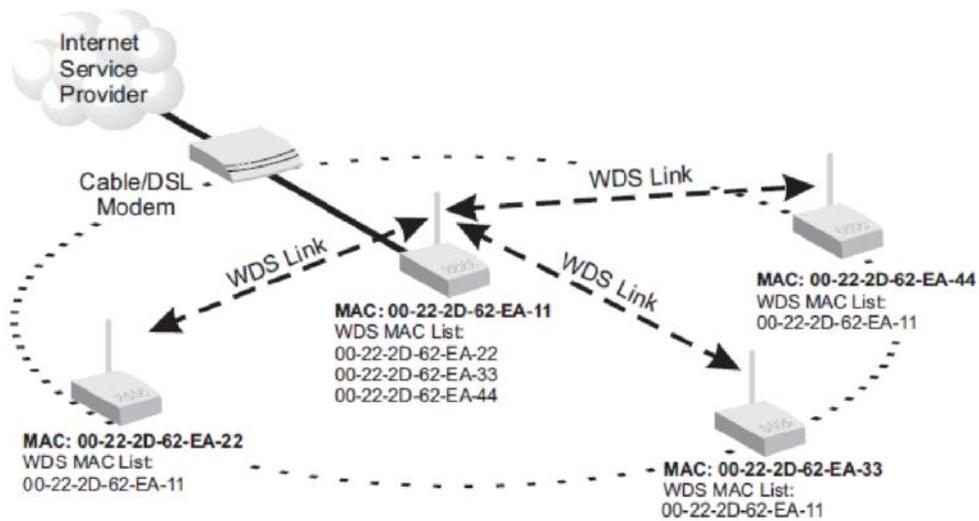

WDS Configuration Example

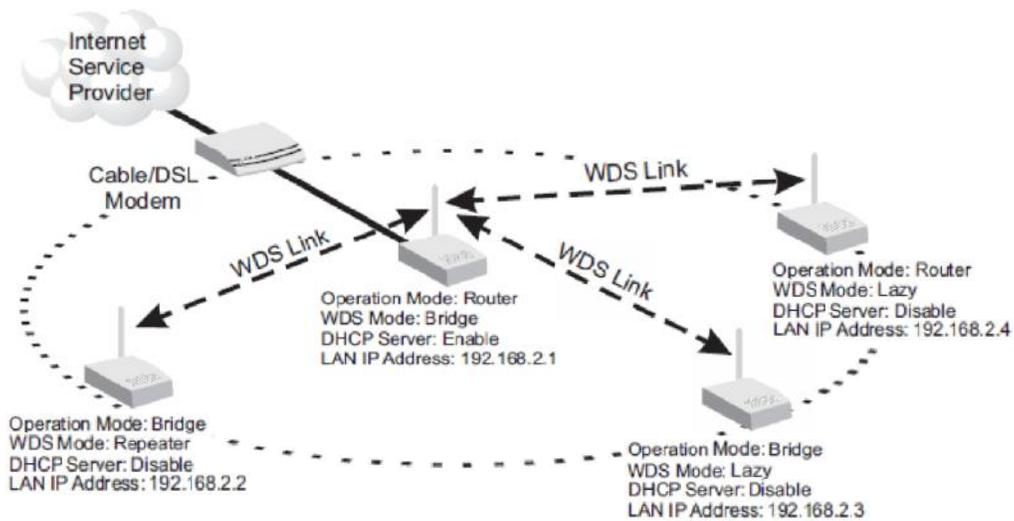

A WDS link between two units can be configured in any of the following Operation Mode combinations:

1. Both units in a link are configured as Router Mode.
2. One unit in a link is configured in Router Mode and the other in Bridge Mode.
3. Both units in a link are configured as Bridge Mode.


When two or more units in the WDS network are set to Router Mode, be sure to check these settings:

Be sure each unit is configured with a different LAN IP address.

Be sure that only one unit has an Internet access on its WAN port.

- ◆ Be sure the DHCP server is enabled only on one unit. When one unit is providing Internet access, enable the DHCP server on that unit.

NOTE: When using WDS Lazy mode in the network, at least one unit must be set to Bridge or Repeater mode.

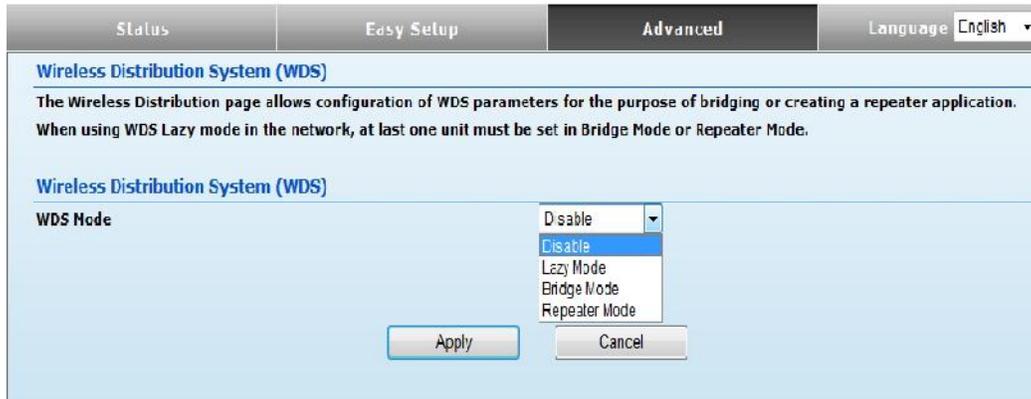


The WDS settings configure WDS related parameters. Up to four MAC addresses can be specified for each unit in the WDS network. WDS links may either be manually configured (Bridge and Repeater modes) or auto discovered (Lazy mode).

The following items are displayed on this page:

- ◆ **WDS Mode** — Selects the WDS mode of the SSID. (Options: Disable, Lazy, Bridge, Repeater. Default: Disable)

Disable: WDS is disabled (default value)

Lazy: Operates in an automatic mode that detects and learns WDS peer addresses from received WDS packets, without the need to configure a WDS MAC list entry. This feature allows the 3G Mobile Wireless Router to associate with other 3G Mobile Wireless Routers in the network and use their WDS MAC list. Lazy mode requires one other 3G Mobile Wireless Router within the wireless network that is configured in Bridge or Repeater mode, and has a configured MAC address list.

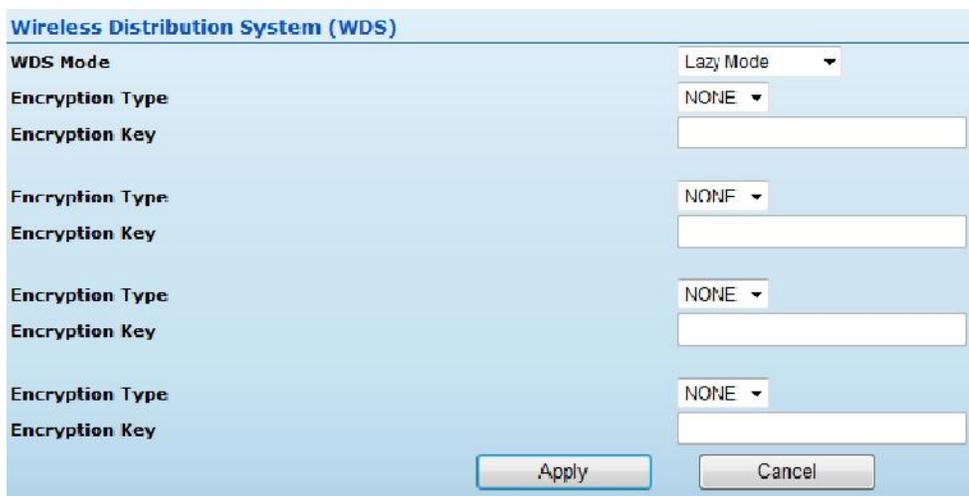

- **Bridge:** Operates as a standard bridge that forwards traffic between WDS links (links that connect to other units in Repeater or Lazy mode). The MAC addresses of WDS peers must be configured on the 3G Mobile Wireless Router.

Wireless Distribution System (WDS)

WDS Mode: Bridge Mode

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Apply Cancel

- **Repeater:** Operates as a wireless repeater, extending the range for remote wireless clients and connecting them to an AP connected to the wired network. The MAC addresses of WDS peers must be configured on the 3G Mobile Wireless Router.

Wireless Distribution System (WDS)

WDS Mode: Repeater Mode

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Encryption Type: NONE

Encryption Key: [Text Input]

AP MAC Address: [Text Input]

Apply Cancel

- ◆ **Encryption Type** — The data encryption used on the WDS link. Be sure that both ends of a WDS link are configured with the same encryption type and key. (Options: None, WEP, TKIP, AES. Default: None)
- ◆ **Encryption Key** — The encryption key for the WDS link. The key type and length varies depending on the encryption type selected. For WEP, enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys. For TKIP or AES, enter a password key phrase of between 8 to 63 ASCII characters, which can include spaces, or specify exactly 64 hexadecimal digits.
- ◆ **AP MAC Address** — The MAC address of the other 3G Mobile Wireless Router in the WDS link.

Wi-Fi Protected Setup (WPS)

Wi-Fi Protected Setup (WPS) is designed to ease installation and activation of security features in wireless networks. WPS has two basic modes of operation, Push-button Configuration (PBC) and Personal Identification Number (PIN). The WPS PIN setup is optional to the PBC setup and provides more security. The WPS button on the 3G Mobile Wireless Router can be pressed at any time to allow a single device to easily join the network. The WPS Settings page includes configuration options for setting WPS device PIN codes and activating the virtual WPS button.

Click on –Wireless Settings, followed by –WPS.



- ◆ **WPS** — Enables WPS, locks security settings, and refreshes WPS configuration information. (Default: Disabled)

WPS Summary — Provides detailed WPS statistical information.

WPS Current Status — Displays if there is currently any WPS traffic connecting to the 3G Mobile Wireless Router. (Options: Start WSC Process; Idle)

WPS Configured — States if WPS for wireless clients has been configured for this device.

WPS SSID — The service set identifier for the unit.

WPS Auth Mode — The method of authentication used.

WPS Encryp Type — The encryption type used for the unit.

WPS Default Key Index — Displays the WEP default key (1~4).

WPS Key (ASCII) — Displays the WPS security key (ASCII) which can be used to ensure the security of the wireless network.

AP PIN — Displays the PIN Code for the 3G Mobile Wireless Router. The default is exclusive for each unit. (Default: 64824901)

Reset WPS to Default — Resets the WPS settings to factory default values.

WPS Config — Configures WPS settings for the 3G Mobile Wireless Router.

◆ **WPS Mode** — Selects between methods of broadcasting the WPS beacon to network clients wanting to join the network:

PIN: The 3G Mobile Wireless Router, along with other WPS devices, such as notebook PCs, cameras, or phones, all come with their own eight-digit PIN code. When one device, the WPS enrollee, sends a PIN code to the 3G Mobile Wireless Router, it becomes the WPS registrar. After configuring PIN-Code information you must press –Applyll to send the beacon, after which you have up to two minutes to activate WPS on devices that need to join the network.

PBC: This has the same effect as pressing the physical WPS button that is located on the front of the 3G Mobile Wireless Router. After checking this option and clicking –Applyll you have up to two minutes to activate WPS on devices that need to join the network.

FIREWALL CONFIGURATION

MAC/IP/PORT FILTERING

MAC/IP/Port filtering restricts connection parameters to limit the risk of intrusion and defends against a wide array of common hacker attacks. MAC/IP/Port filtering allows the unit to permit, deny or proxy traffic through its MAC addresses, IP addresses and ports. The 3G Mobile Wireless Router allows you define a sequential list of permit or deny filtering rules (up to 32). This device tests ingress packets against the filter rules one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the packet is either accepted or dropped depending on the default policy setting.

MAC/IP/Port Filtering Settings
This section allows you to configure the firewall to filter based on MAC, IP or port to protect your network from viruses and other malicious activity on the Internet.

Basic Settings

MAC/IP/Port Filtering: Default Policy: Describes how packets not matching any rules will be handled:

Current MAC/IP/Port filtering rules in system

No.	MAC address	DIP	SIP	Protocol	DPR	SPR	Action	Comment
Others would be dropped								

MAC/IP/Port Filtering — Enables or disables MAC/IP/Port Filtering.
(Default: Disable)

Default Policy — When MAC/IP/Port Filtering is enabled, the default policy will be enabled. If you set the default policy to –Dropped, all incoming packets that don't match the rules will be dropped. If the policy is set to "Accepted," all incoming packets that don't match the rules are accepted. (Default: Dropped)

MAC Address — Specifies the MAC address to block or allow traffic from.

Destination IP Address — Specifies the destination IP address to block or allow traffic from.

Source IP Address — Specifies the source IP address to block or allow traffic from.

Protocol — Specifies the destination port type, TCP, UDP or ICMP. (Default: None).

Destination Port Range — Specifies the range of destination port to block traffic from the specified LAN IP address from reaching.

Source Port Range — Specifies the range of source port to block traffic from the specified LAN IP address from reaching.

Action — Specifies if traffic should be accepted or dropped. (Default: Accept)

Comment — Enter a useful comment to help identify the filtering rules.

CURRENT FILTER RULES

The Current Filter Table displays the configured IP addresses and ports that are permitted or denied access to and from the 3G Mobile Wireless Router.

Select — Selects a table entry.

MAC Address — Displays a MAC address to filter.

Destination IP Address — Displays the destination IP address.

Source IP Address — Displays the source IP address.

Protocol — Displays the protocol type.

Destination Port Range — Displays the destination port range.

Source Port Range — Displays the source port range.

Action — Displays if the specified traffic is accepted or dropped.

Comment — Displays a useful comment to identify the filter rules.

VIRTUAL SERVER SETTINGS (PORT FORWARDING)

Virtual Server (sometimes referred to as Port Forwarding) is the act of forwarding traffic from one network node to another based on received protocol port number. This technique can allow an external user to reach a port on a private IP address (inside a LAN) from the outside through a NAT-enabled router. (Maximum 32 entries are allowed.)

Virtual Server Settings
This section is provided for the configuration of the Virtual Server.

Virtual Server
Virtual Server: Enable ▾
Apply

Virtual Server Settings

IP Address:
 Private Port:
 Public Port:
 Protocol: TCP&UDP ▾
 Comment:
 (The maximum rule count is 32.)
 Apply Reset

Current Virtual Servers in system

No.	IP Address	Port Mapping	Protocol	Comment
Delete Selected Reset				

Virtual Server — Selects between enabling or disabling port forwarding the virtual server. (Default: Disable)

IP Address — Specifies the IP address of a server on the local network to allow external access.

Private Port — The protocol port number on the local server.

◆ **Public Port** — The protocol port number on the router’s WAN interface.

◆ **Protocol** — Specifies the protocol to forward, either TCP, UDP, or TCP&UDP.

◆ **Comment** — Enter a useful comment to help identify the port forwarding service on the network.

CURRENT VIRTUAL SERVERS IN SYSTEM

The Current Port Forwarding Table displays the entries that are allowed to forward packets through the 3G Mobile Wireless Router’s firewall.

No. — The table entry number.

IP Address — The IP address of a server on the local network to allow external access.

Port Mapping — Displays the port mapping for the server.

Protocol — Displays the protocol used for forwarding this port.

Comment — Displays a useful comment to identify the nature of the port to be forwarded.

DMZ

Enables a specified host PC on the local network to access the Internet without any firewall protection. Some Internet applications, such as interactive games or video conferencing, may not function properly behind the 3G Mobile Wireless Router's firewall. By specifying a Demilitarized Zone (DMZ) host, the PC's TCP ports are completely exposed to the Internet, allowing open two-way communication. The host PC should be assigned a static IP address (which is mapped to its MAC address) and this must be configured as the DMZ IP address.

DMZ Settings

This section is dedicated to the DMZ, or De-Militarized Zone. Since some Internet applications, such as interactive games or video may not function properly behind the firewall, the DMZ allows a specified host on the LAN to access the Internet without any firewall protection.

DMZ Settings

DMZ Settings

DMZ IP Address

DMZ Settings — Sets the DMZ status. (Default: Disable)

DMZ IP Address — Specifies an IP address on the local network allowed unblocked access to the WAN.

CONTENT FILTERING

The 3G Mobile Wireless Router provides a variety of options for blocking Internet access based on content, URL and host name.

Content Filter Settings

The Content Filtering Settings page helps to control access through various types of restrictions.

Current Web URL Filters

No	URL
	<input type="text"/>

Add a URL filter

Current Website Host Filters

No	Host (Keyword)
	<input type="text"/>

Add a Host (keyword) filter

Web URL Filter Settings — By filtering inbound Uniform Resource Locators (URLs) the risk of compromising the network can be reduced. URLs are commonly used to point to websites. By specifying a URL or a keyword contained in a URL traffic from that site may be blocked.

Current URL Filters — Displays current URL filter.

Add a URL Filter — Adds a URL filter to the settings. For

example,myhost.example.com.

Web Host Filter Settings — The 3G Mobile Wireless Router allows


Internet content access to be restricted based on web address keywords and web domains. A domain name is the name of a particular web site. For example, for the address www.FUNGAMES.com, the domain name is FUNGAMES.com. Enter the Keyword then click –Add.¶

Current Host Filters — Displays current Host filter.

Add a Host Filter — Enters the keyword for a host filtering.

LANGUAGE SELECTION

Select between English, Traditional Chinese, and Simplified Chinese just from drop down menu as shown in below.

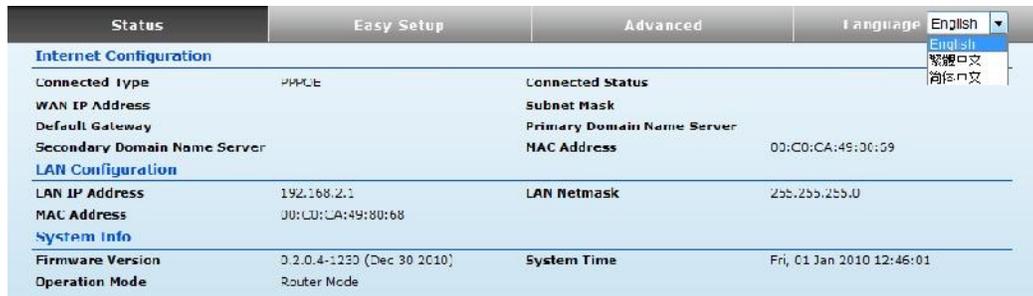

The screenshot shows the router's configuration interface with a language selection dropdown menu open. The menu options are English, 繁體中文 (Traditional Chinese), and 簡體中文 (Simplified Chinese). The current selection is English.

Status	Easy Setup	Advanced	Language
Internet Configuration			
Connected Type	PPPoE	Connected Status	
WAN IP Address		Subnet Mask	
Default Gateway		Primary Domain Name Server	
Secondary Domain Name Server		MAC Address	00:C0:CA:49:00:09
LAN Configuration			
LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:C0:CA:49:80:68		
System Info			
Firmware Version	0.2.0.4-1230 (Dec 30 2010)	System Time	Fri, 01 Jan 2010 12:46:01
Operation Mode	Router Mode		

ADVANCED SETTINGS

The Advanced Settings section on the Advanced page includes time setting, power saving, and DDNS features.

The screenshot shows the 'Advanced' configuration page of a router. It is divided into three sections: 'Time Zone Settings', 'Green AP', and 'DDNS Settings'.
Time Zone Settings: 'Current Time' is 'Fri, 01 Jan 2010 12:48:23' with a 'Sync with host' button. 'Time Zone' is '(GMT+08:00) Taipei'. 'SNTP Server' is 'time.nist.gov' with a help icon. 'SNTP synchronization (hours)' is '6'.
Green AP: Contains two tables. The first is 'Power Saving' with 4 rows of 'Duration' (HH:MM ~ HH:MM) and 'Action' (Disable). The second is 'Power ON/OFF' for 'ALFA_AP' with 4 rows of 'Duration' and 'Action' (Disable).
DDNS Settings: 'Dynamic DNS Provider' is 'None'. 'Host Name', 'User Name', and 'Password' fields are empty.

TIME ZONE SETTING

This is a close-up of the 'Time Zone Settings' section from the previous screenshot. It shows the 'Current Time' field with a 'Sync with host' button, the 'Time Zone' dropdown menu, the 'SNTP Server' text input, and the 'SNTP synchronization (hours)' text input.

- ◆ **Current Time** — Receives a time and date stamp from an SNTP server.
- ◆ **Sync with host** — Updates the unit's time from the web management PC's system time.
- ◆ **Time Zone** — Select the time zone that is applicable to your region.
- ◆ **SNTP Server** — Enter the address of an SNTP server to receive time updates.
- ◆ **SNTP synchronization (hours)** — Specify the interval between SNTP server updates.

GREEN AP, where you can setup output power for your R36 and/or wireless adapter.

This is a close-up of the 'Green AP' section. It features two tables. The first table, 'Power Saving', has 4 rows with 'Duration' (HH:MM ~ HH:MM) and 'Action' (Disable) columns. The second table, 'Power ON/OFF', is for 'ALFA_AP' and also has 4 rows with 'Duration' and 'Action' (Disable) columns. 'Apply' and 'Cancel' buttons are at the bottom.

DDNS SETTING (DYNAMIC DOMAIN NAME SERVER)



The image shows a 'DDNS Settings' dialog box with a blue header. It contains the following fields and controls:

- Dynamic DNS Provider:** A dropdown menu currently showing 'None'. A list is open below it with options: 'None', 'Dyndns.org', 'freedns.afraid.org', 'www.zoneedit.com', and 'www.no-ip.com'.
- HostName:** An empty text input field.
- User Name:** An empty text input field.
- Password:** An empty text input field.
- Buttons:** 'Apply' and 'Cancel' buttons are located at the bottom right of the dialog.

User Name — Sets the DDNS user name for the connection.

Password — Sets a DDNS password for the connection.

HostName — The host name that you selected from the DDNS service provider.

[PDF to Word](#)